

SINGER*

Model
Inspiration series (4210, 4220, 4228)
Futura series (100, 200, 6010, 9000)
Merritt series (1872, 1873, 2517, 2108, 3014, 3130, 3145, 3314, 3317, 4525, 4526, 4528, 4530, 4538, 6021)
Fasion Mate series (14C, 17, 22C, 237, 248, 257, 288, 360, 362, 7256)
Millennium series (6408, 6412, 6416, 6423,
Tradition series (2250, 2259, 2277,
Scholastic series (5511, 5523, 6510, 8280)
Confidence series (7463, 7467, 7467S, 7469Q, 7470)
1019, 1021, 1022, 1025, 1027, 1103, 1105, 1106, 1108, 1116, 1120, 1130, 1200-1, 1247N, 1260, 1263N, 127, 127-12, 127-3 Vibrating Shuttle, 128, 1280N, 1288N, 132Q FEATHERWEIGHT®, 13400, 1409 Promise, 15 Class, 15-125, 15-30, 15-86, 15-87, 15-88, 15-90, 15-91, 15-96, 15-97, 1500 Izek, 1507WC, 1525, 1725, 185, 1800 series (1800, 1802, 1803, 1812, 1852, 1862)
2020, 2102, 2105, 2106, 2010 Superb, 2110, 2112, 2114, 2118, 2202, 2263 Simple, 2273 Esteem II, 2302, 2303, 2304, 2315, 2330, 2404, 2430, 2440, 2600, 2601, 2602, 2603, 2604, 2605, 2615, 2616, 2623, 2628, 2630, 2638, 2643, 2662, 27 Vibrating Shuttle, 2732, 2932, 293B, 200 series (200, 201, 201-2, 202, 203, 204, 205, 206, 206K, 207, 208, 209, 210, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221 FEATHERWEIGHT®, 221 Quilter, 222, 223, 224, 227, 228, 237, 239, 240, 242, 244, 247, 247AP, 250, 252, 254, 258, 259, 263), 2500 series (2500, 2503, 2504, 2515, 2530, 2543)

3001, 3002, 3003, 3004, 3005, 3006, 3007, 3008, 3009, 3010, 3011, 3012, 3013, 3015, 302, 30215, 30218, 305, 30518, 306K, 306K25, 306W, 320, 3207, 3208, 3214, 3215, 322, 3221 Talent, 324 Prelude, 3270, 327, 327K, 328K, 28K, Style-O-Matic, 329K, 330, 3302, 3305, 3311, 3343, 337, 338, 340, 342, 345, 347K, 348K, 350, 350 Series, 353 Genie, 354 Genie, 360 Series, 367, 3800, 3810, 3820, 3825, 384 Sears Model, 384.13012000, 384.18024000, **3100 series** (3100, 3102, 3103, 3116 Simple, 3133, 3140)

413K, 413K13, 416K Stylist, 418K Stylist, 419, 4205, 4302, 4305, 4314, 4325, 438K, 4411 Heavy Duty, 4423 Heavy Duty, 4514, 4517, 4522, 457K, 4611, 466K Stylist, 476, 476, 476 Stylist, 477K, 478K, 4814, 4823, 4830, 4830NWC, 4832, 484, 490, 495, 4000 series (4000, 4001, 4002, 4003, 4004, 4005, 4006, 4007, 4008, 4009, 4010, 4011, 4012, 4013, 4014, 4015, 4016, 4017, 4018, 4019, 4020, 4022, 4021)

5017, 502, 5028, 5040, 5050, 507, 509, 5102, 5107, 5122, 5123, 5124, 5127, 513 Stylist, 5130, 514, 5140, 5144, 5147, 5160, 5170, 518 Stylist, 5180, 521, 522, 5255, 527, 533 Stylist, 534 Stylist, 535, 538 Stylist, 5405, 543, 5050, 5500 Series, 5502, 5504, 5508, 5522, 5524, 5525, 5528, 5530, 560 Series, 5705, 5710, 5735, 57817C, 57820, 57825C, 5800, 5802, 5805, 5806, 5808, 5810, 5817C, 5818, 5823, 5825, 5828, 5830, 5838

6011, 6012, 6038, 6100, 6100 Series, 6104, 6105, 6106, 610U, 6110, 6136, 6160, 6180 Brilliance, 6199 Brilliance, 6201, 6202, 6211, 6212, 6215, 6217, 6252, 6305, 6500 Series, 6544 Stylist, 6548 Stylist, 66, 66-1, 66-14, 66-16, 66-18, 66-24, 66-3, 6620

7011, 7015, 7021 Debutante, 7025C, 7258 Stylist, 7300, 7400, 7422 Advance, 7424, 7426, 7430, 7436 Ingenuity, 7440, 7442, 7444, 7446, 7460, 7462, 7462 Touch & Sew, 7464, 7466, **7100 series** (7100, 7106, 7108, 7110, 7174, 7184)

800 Series, 807, 814 Stylist, 8200, 8220, 8222, 8234 Magic, 827, 8280 Prélude, 831, 832, 833 Stylist, 834 Stylist, 842, 843, 8500, 8508, 860, 8600, 8734, 875, 8763 Curvy, 876, 8770 Curvy, 8774, 8780 Curvy, 8784, 8834, **8000 series** (8000, 8002, 8007, 8010, 8014, 8019, 8034)

9002, 9014, 9500 Series, 9600 Series, 9612, 9618, 972, 9800 Series,
99-31, 99K, 9910, 9920, 9960, 9960 Quantum Stylist, CE-100, CE-200,
CG 500, CG 550, CG 590, CM17C Craft Mate, DL17C, DSX, HD102,
HD105, HD110, SM14C, Sonota, Spartan, XL1 Quantum